

Quick start MANUAL

TronTracker BC10 Dual Charger



1b Wall mounting

The charger can also be mounted on a wall. Use two screws with a maximum diameter of 4.5 mm for the upper holes and two screws with a maximum diameter of 3.5 mm for the lower holes.


(Wood screws with a diameter of 4.5 mm can be used for all four holes).

1.

Insert the upper screws on the wall before placing the charger. The charger can be used as a template.


2.

Slide the charger up against the wall so that the screws enter the slots in the charger. Make sure there is a tight fit between the screws and the charger.

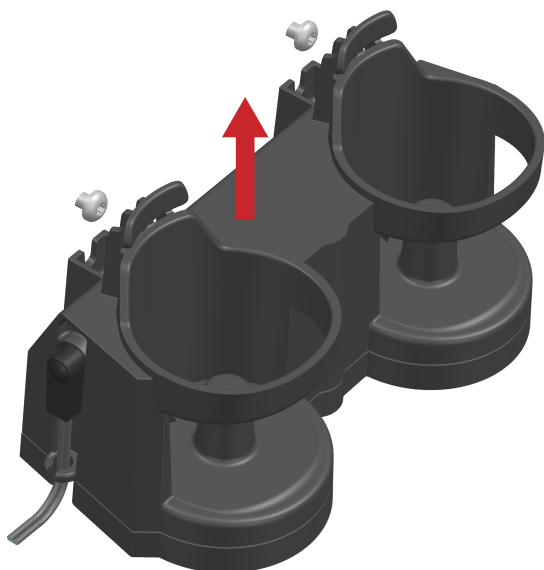


1a Table mounting

Place the charger in a suitable indoor location, protected from water splashes. Secure it to the table by using two screws in the holes as indicated. The hole diameter is 4.8 mm.

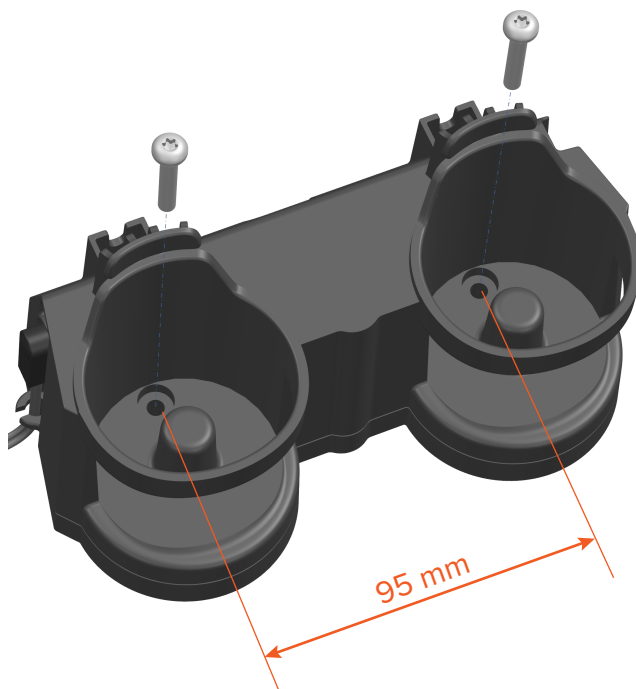

3.

Secure the charger to the wall by inserting the two lower screws.

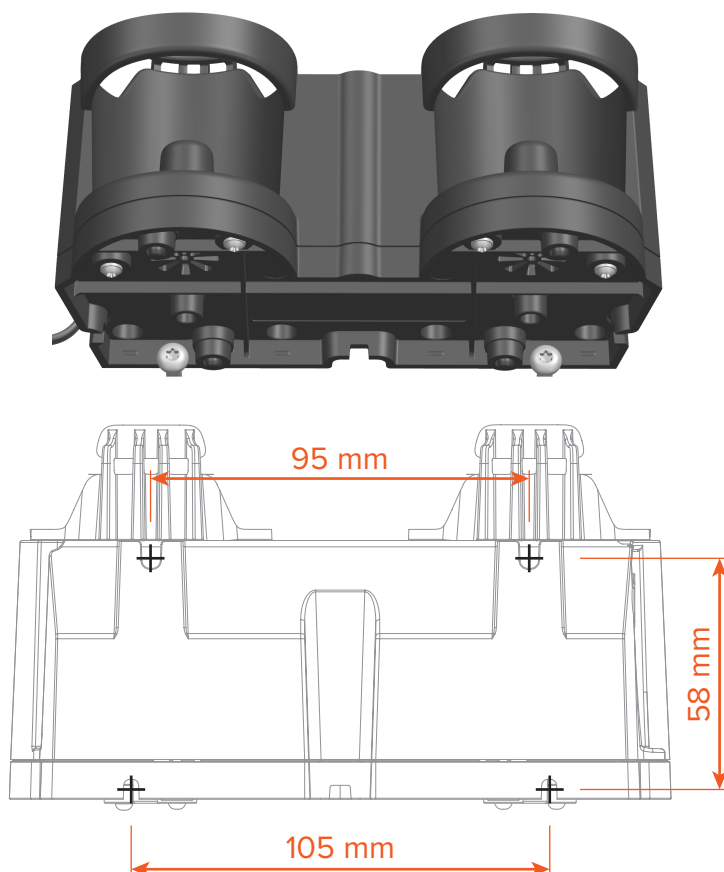


2 Power connection

The power connection and an indicator is located on the left side of the charger. The green indicator will light up when the charger is powered.



Connect the charger to the ship's power supply (12–24 VDC). The ribbed wire is the negative terminal and the center pin is the positive terminal.

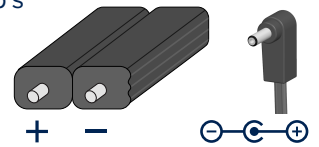


Plug the connector into the hole on the side of the charger. Feed the cable into the clip at the bottom for strain relief.

The cable can also be routed through the groove under the charger.

3 Charging the Tracker


The Dual Charger can charge two Trackers simultaneously. Place the Tracker in the charger and rotate to lock it.

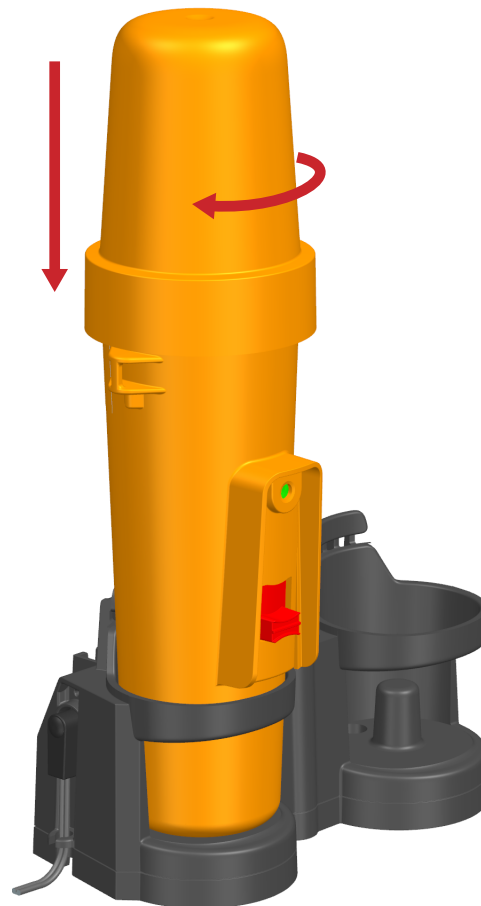




4 Indicator descriptions

While charging, the indicator on the Tracker will show the charging status.

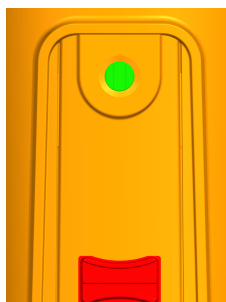A red light indicates that the Tracker is not charging. This typically occurs if the battery temperature is outside the charging range of +5°C to +40°C.



-  **Green light**
The tracker is fully charged
-  **Pulsating green light**
The tracker is charging
-  **Flashing red light**
The tracker is not charging

Translated manuals:



jotron.com

106133 Rev B